


Basic User - Operator

Installing Meshtastic Phone App

- Refer to [Meshtastic software documentation](#) for additional support on installing the mobile apps.

Apple



- Download [Meshtastic](#) from Apple Store or scan QR code below

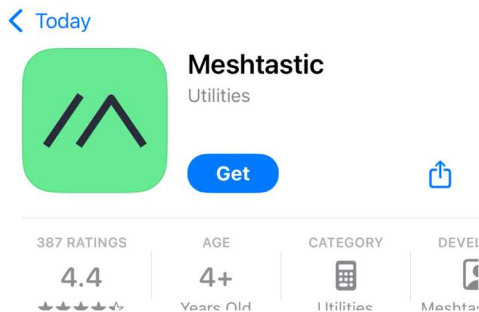

- Open Meshtastic app once installation is complete
- Click **“Allow”** when prompted to find Bluetooth devices
- Click **“Get started”**
- Click **“Configure notification permissions”** and press **“Allow”** when prompted to allow notifications
- Click **“Allow”** when prompted about sending Critical Alerts
- Click **“Configure location settings”** and press **“Don’t allow”** as location is not needed in-cave

Android

- Download [Meshtastic](#) from Google Play store, through [alternate repo\(s\)](#), or scan the QR code below:

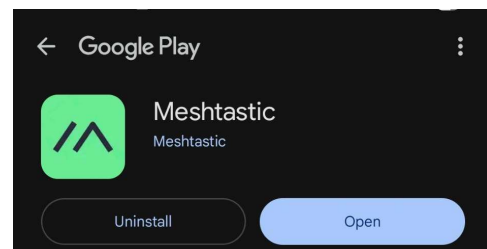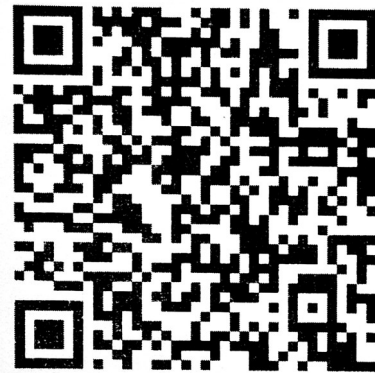


- Open Meshtastic app once installation is complete
- Press **“Next”** 2x and **“Done”** to get through intro
- Click **“Scan”** under Bluetooth and press **“Allow”** when prompted about finding nearby devices
- If prompted, allow notification permission

Connecting to Known Node


- Assuming radio is powered up and have the app open

Apple

- On the **"Bluetooth"** tab under **"Available Radios,"** select the desired node name

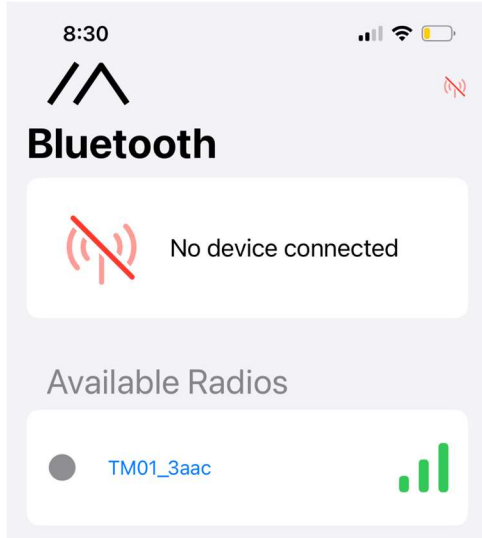


- Verify node says **"Subscribed"** in green text

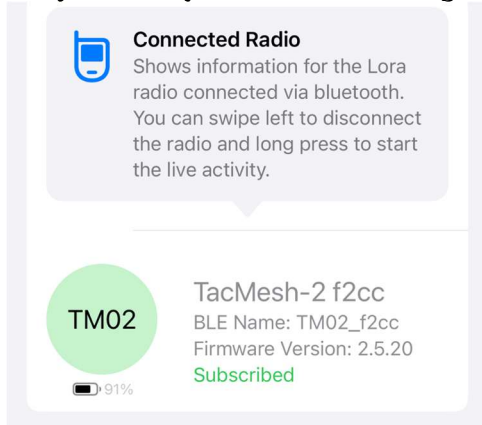


Android


- Click Connections tab in bottom right (**cloud icon**)



- Under the **"Bluetooth"** list, select the desired node's name
 - Cloud will be red with slash when not connected

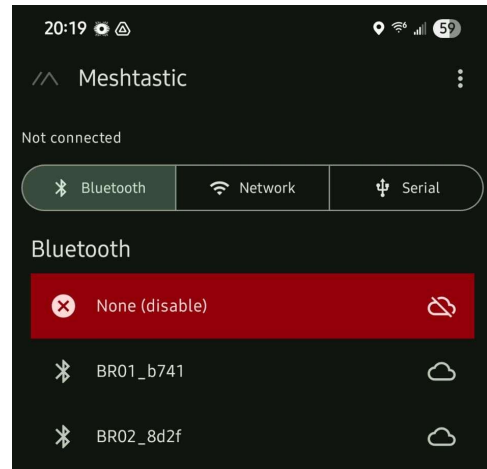

- Verify cloud icon turns green (indicates connected)

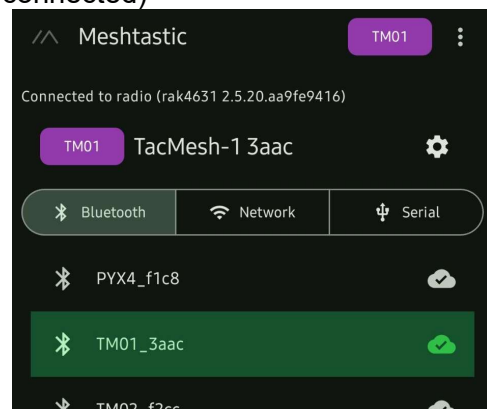


Pairing to New Node

- Assuming radio is powered up and have the app open

Apple


- Under “**Available Radios**,” select the node name
- If prompted, click “**Connect to new radio?**”

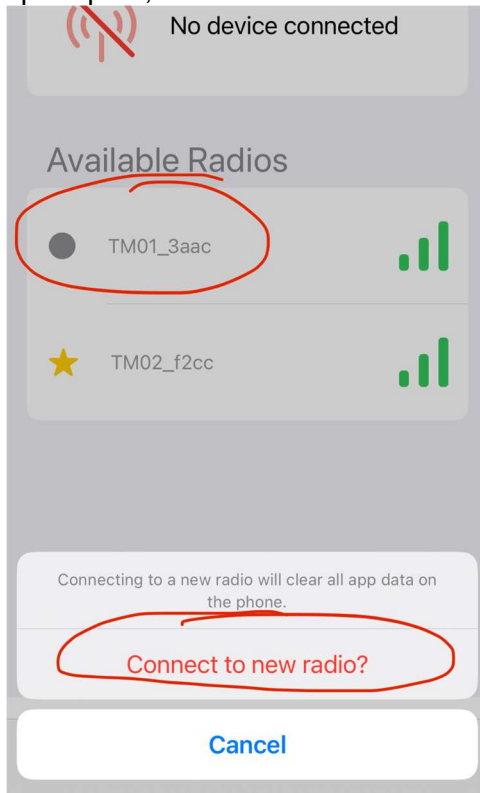

- When prompted, enter the Bluetooth PIN “**911911**” and press “**Pair**”
- Verify node says “**Subscribed**” in green text

Android

- Click Connections tab in bottom right (**cloud icon**)
- Under the “**Bluetooth**” list, scroll to bottom and press “**Scan**”

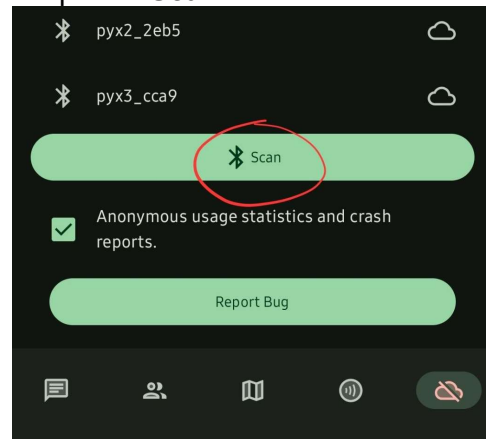


- Under “**Select a Bluetooth device**,” click on new node
- When prompted, enter the Bluetooth PIN “**911911**” and press “**Pair**”
- Verify settings load and cloud icon goes green

Disconnecting from a Radio

- Assuming radio is powered up and you are connected to a radio via the app
- NOTE:
 - It is crucial to **ALWAYS disconnect from a node when walking away from it**. Staying connected will lock out all other users from being able to pair to it, even from a long distance.

Apple


1. Swipe **left** on the Subscribed node and press **“Disconnect”**

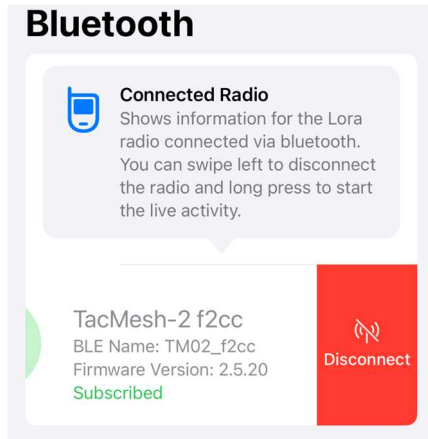

2. Verify app says **“No device connected”**

Android

1. On the Connections tab, select **“None (disable)”** from the device list

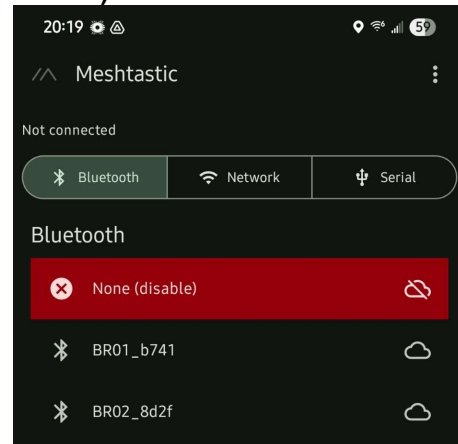


2. Verify cloud icon turns red and **“None (disable)”** is highlighted

Sending Message to Chatroom


- Chatroom messages are visible to anyone on the network
- Assuming radios are powered up and you are connected to a radio via the app
- NOTE:
 - **“Acknowledged”** or **“Delivered to Mesh”** indicates some neighboring node has picked up your message. This does not mean it has been delivered but that it has entered the network.
 - **DO NOT send the “Alert bell” in any messages.** This may be reserved for a special function for setup mode for FLAMINGO.

Apple

1. Under **“Messages”** tab, select **“Channels”**

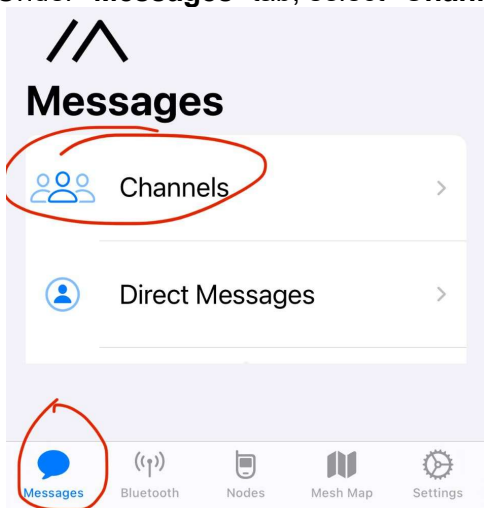


2. Under **“Channels,”** select **“HCRU-1”** or relevant channel

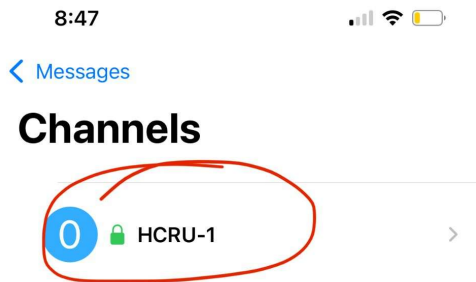


Android

1. Select the Messages tab in the bottom left (**chat bubble icon**)
2. Select the **“HCRU-1”** chatroom or relevant channel

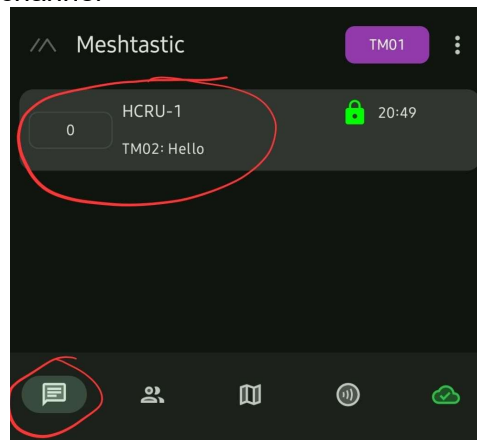


Apple

3. Compose message and press send

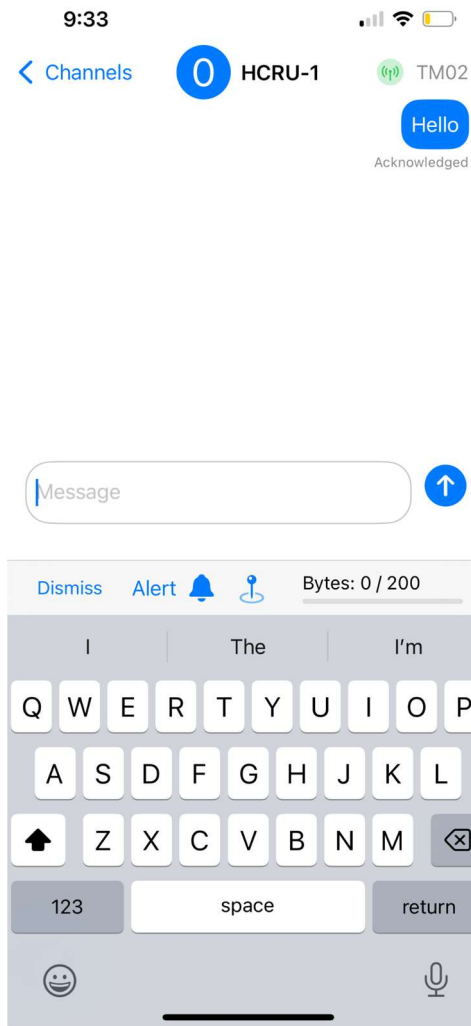

Android

3. Compose and send message(s)

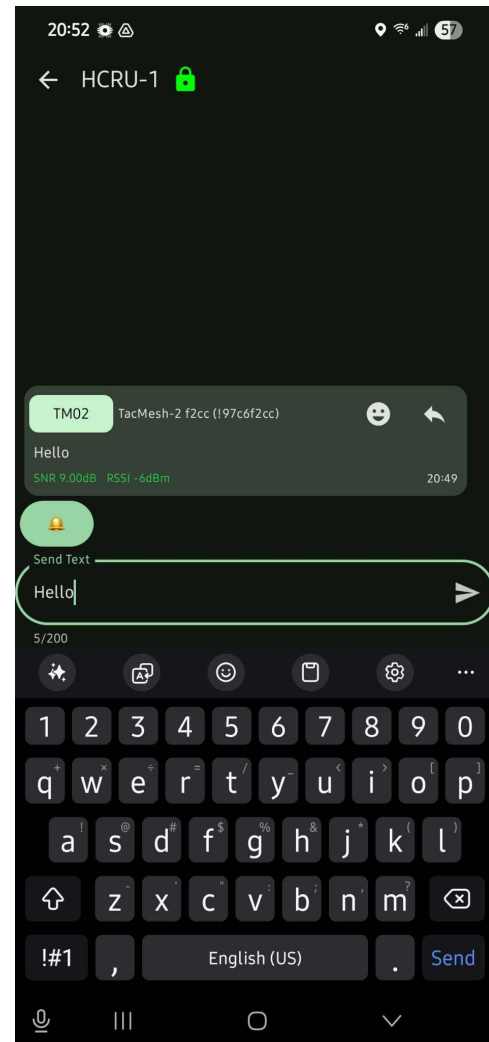


Sending Direct Messages (we do not recommend this)


- Direct messages are only visible to the recipient and yourself
- Assuming radios are powered up and you are connected to a radio via the app
- NOTE:
 - **“Acknowledged”** indicates some neighboring node has picked up your message. This does not mean it has been delivered but that it has entered the network.
 - **“Delivery Confirmed”** (user and checkmark icon) indicates that the recipient’s node has received your message and is digitally acknowledging
 - **DO NOT send the “Alert bell” in any messages.** This may be reserved for a special function for setup mode for FLAMINGO.

Apple

1. Under **“Messages”** tab, select **“Direct Messages”**

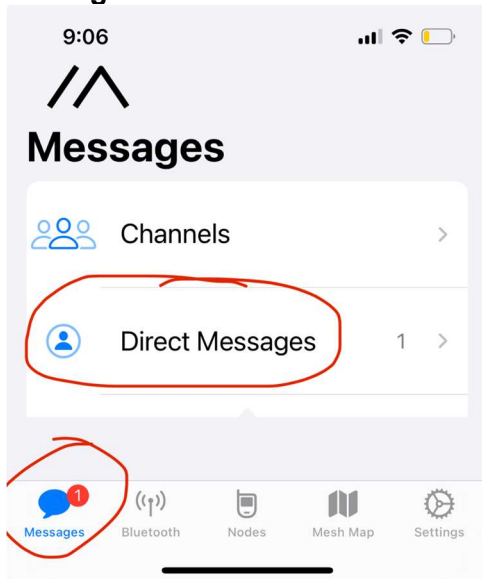


2. Under **“Contacts,”** select the recipient

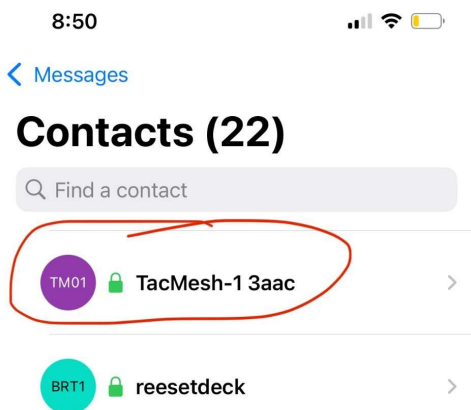

Android

1. Select the Contacts tab in the bottom left (**people icon**)
2. Click on the recipient’s **callsign** from the list
 - a. Note your own node will always be the one at the top of the list

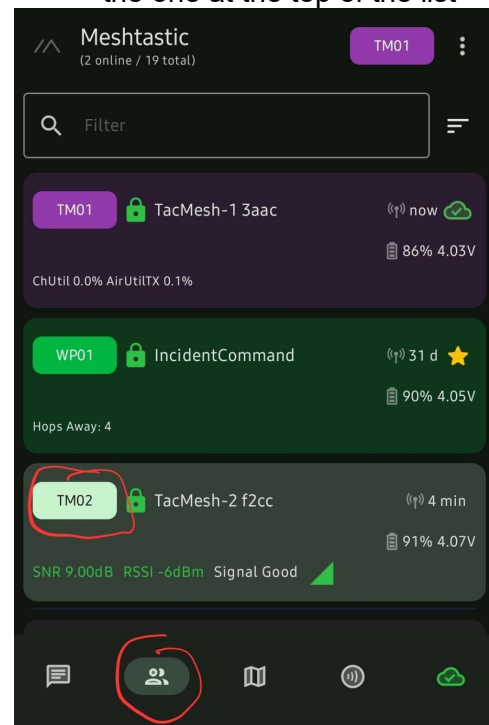


- 3.

Apple

3. Compose message and press send

Android

4. Scroll down and select **“Direct Message”**

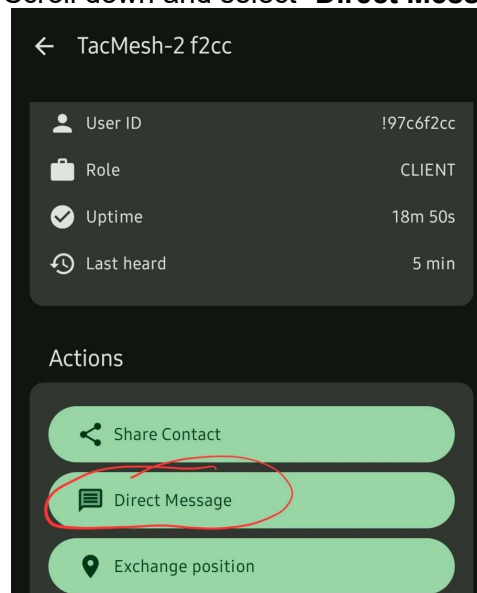

5. Compose message and press send